

User Manual

Translation of the original

Professional Setup Manager Touch Control

 
Model No.: JK 164 / 50-4 TT TLT
Model No.: JK 164 / 50-4 TT HLT

1028366-00A /us-en / 11.2022

Contact information



Customer Service



JK Products & Services
411 West Washington Avenue
Suite B
Jonesboro, Arkansas 72401
800-445-0624
870-935-9046
<http://jkproducts.us/service>

Manufacturer



JK-Products GmbH
Rottbitzer Str. 69
53604 Bad Honnef
GERMANY
Tel.: +49 (0) 22 24 / 818-140
Fax: +49 (0) 22 24 / 818-166

⚠ WARNING!



WARNING!

Read these operating instructions.

Failure to observe these instructions:

- may result in serious injury and death,
- can result in damage to the device and the environment.
- For the safety of yourself and others, read and observe all instructions contained herein before operating the device.
- Please make the instructions and additional information available to anyone who operates or services the device.

Copyright

The copyright remains with JK-Holding GmbH.

The contents may not be duplicated (in whole or part), distributed or utilized for competition purposes without authorization or disclosed to other parties.

The right to make technical changes in regard to the figures and information contained in this instruction manual is reserved!

Table of Contents

1	Operation.....	4
1.1	User safety information	4
1.2	Overview Professional Setup Manager	4
1.2.1	Navigation / operation	6
1.3	User settings overview.....	6
2	PROFESSIONAL SETUP MANAGER.....	7
2.1	General instructions	7
2.1.1	Open Professional Setup Manager.....	7
2.1.2	Master code.....	7
2.1.3	Chip cards.....	9
2.1.4	Pre-settings overview.....	10
3	Index.....	47



1 Operation

1.1 User safety information



⚠ WARNING!



Danger of hearing damage!


Listening to music at a high volume can result in permanent hearing damage.

- Do not set the volume too high.

Observe the warning notices in the operating instructions for the device, in particular the contra-indications.

1.2 Overview Professional Setup Manager

Program selection

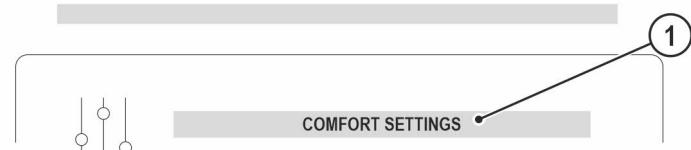

- Comfort settings


Menu Professional Setup Manager



NOTE:

To call up the PROFESSIONAL SETUP MANAGER, press on the logo (Pos. 2).




Menu Professional Setup Manager

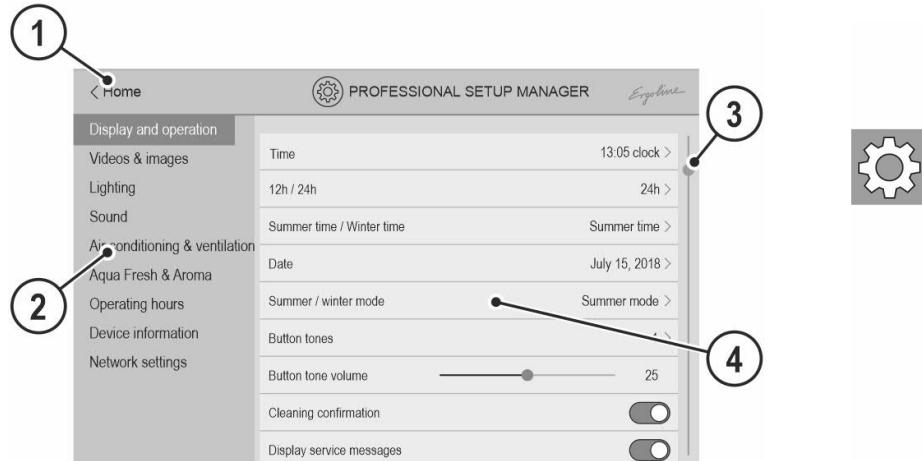

1. 'Home' button
2. Sub-menus
3. Scroll bar
4. Status display and setting options in the sub-menu



 1.2.1 Navigation / operation

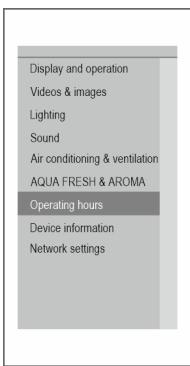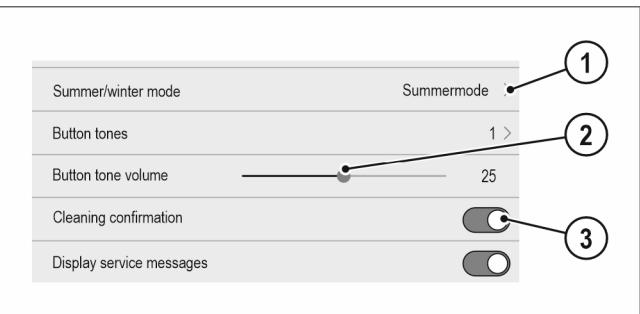Display	Information
	The 'Home' button closes the PROFESSIONAL SETUP MANAGER. The 'Program selection' menu appears again.
	Select the menu by tapping on it.
	If a scroll bar is displayed on the right side, the visible section can be moved.
	By selecting (Pos. 1), sliding (Pos. 2) or moving the slider (Pos.3), the pre-settings can be adjusted.
	'Confirm' by tapping.
	Go 'Back' by tapping the selection menu.
	'Reset' (the settings).
	'Delete' by tapping.

1.3 User settings overview

In PROFESSIONAL SETUP MANAGER, operating states can be called up and pre-settings entered.

2 PROFESSIONAL SETUP MANAGER

In PROFESSIONAL SETUP MANAGER, operating states can be called up and pre-settings entered.



2.1 General instructions



NOTE:

Pre-setting mode can only be called up when tanning is not taking place.

30 seconds after the last button was pressed, the device changes automatically into standby mode and the currently set values are saved.




NOTE:

If the video option is activated the PROFESSIONAL SETUP MANAGER PLUS has to be touched briefly to be activated.

2.1.1 Open Professional Setup Manager

- Press the logo to open PROFESSIONAL SETUP MANAGER.

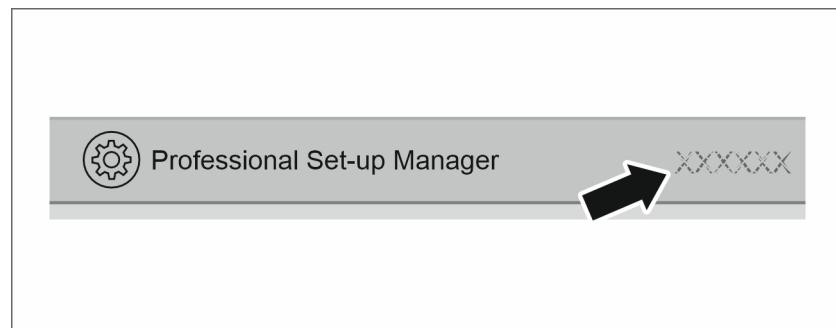

- Enter the master code.
- Confirm the master code

2.1.2 Master code

The master code allows you to access all of the pre-settings. If you know the current master code, you can specify a new code at any time.

If you have forgotten the code, please contact customer service.

Code upon delivery (factory default)

Master code: 1000




NOTE:

We recommend that you set a new master code when starting up the device for the first time in order to prevent unauthorized access to the pre-setting mode. Please make a note of the code for customer service.


Changing the code

- In the PROFESSIONAL SETUP MANAGER, please select the 'Device information' menu.

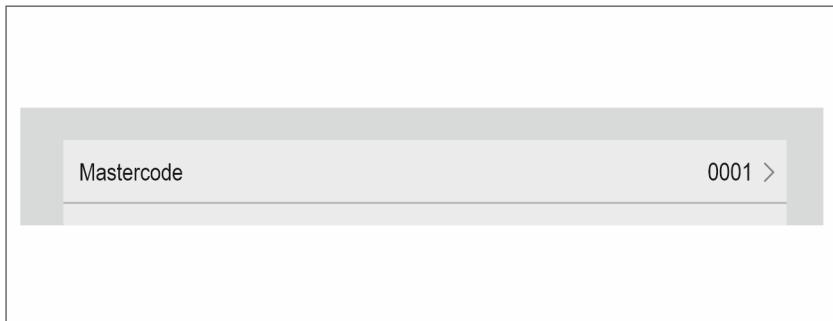

- Press on the arrow .

Change the master code:

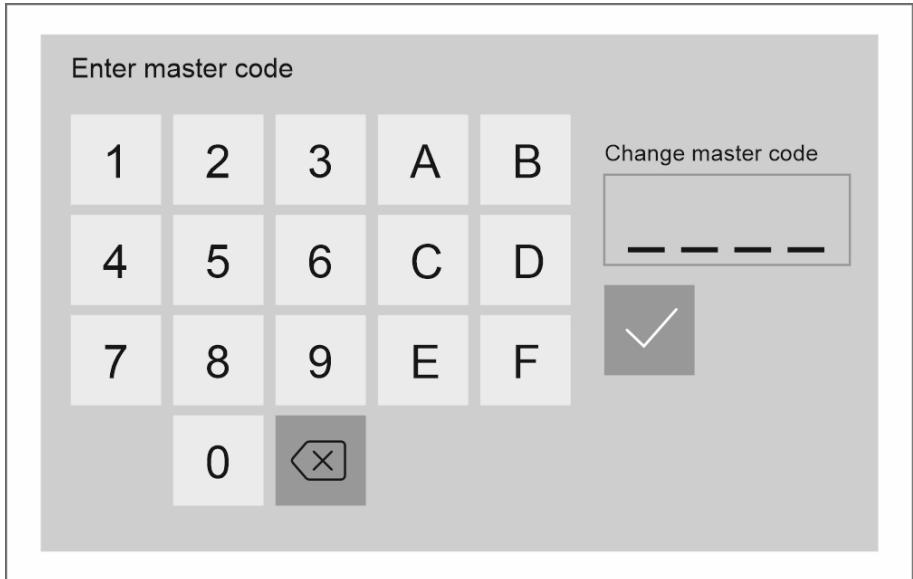




- Enter the desired code via the keypad.

Once the code has been set, press . The set code is saved.



Resetting to the delivery setting.

In the 'Device information' menu, you can reset the master code to the delivery state at any time.

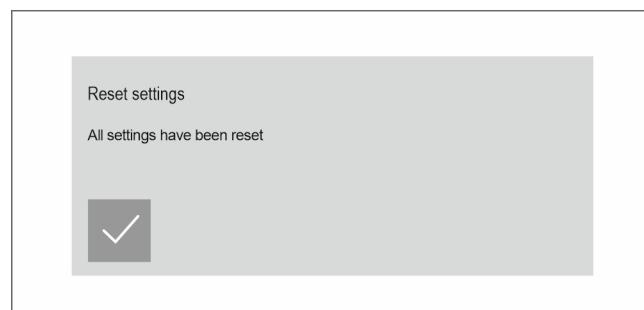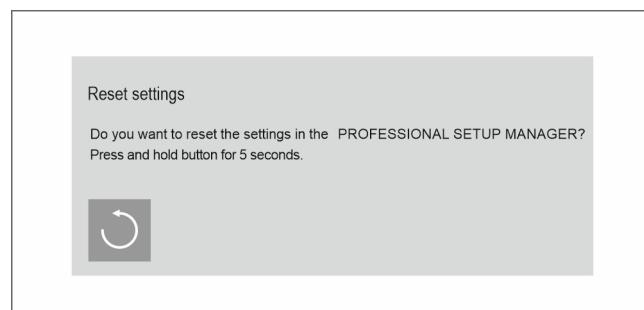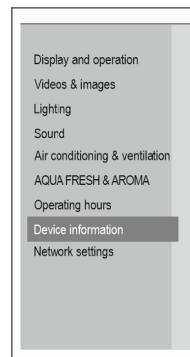

– Now re-enter the master code.

2.1.3 Chip cards

The function is currently not activated.




NOTE:

Our products are continually improved to adapt them to your requirements. Please visit our website to download the latest version of the user manual:
www.jk-globalservice.de

2.1.4 Pre-settings overview

Default setting	Description
Menu 01: DISPLAY AND OPERATION	

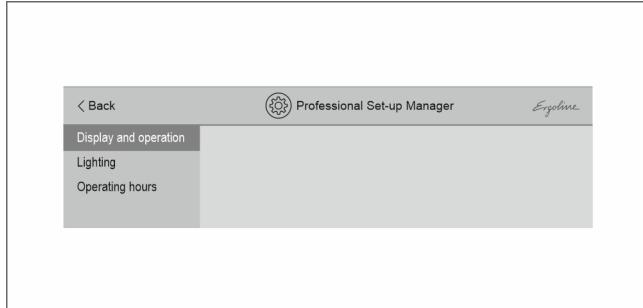

Setting options

Time	13:19 o'clock
12h / 24h	24h
Date	09. December 2022
Summer/winter mode	Summer mode
Button tones	2
Button tone volume	8
Cleaning confirmation	<input checked="" type="checkbox"/>
PSM - Set login in interior display to inactive	<input checked="" type="checkbox"/>
Hide service messages	<input checked="" type="checkbox"/>
TWIN PERFORMANCE	<input checked="" type="checkbox"/>
Emergency shut-down time	10 Min.
Active customer settings	180 Sec.
Programme selection	Without pre-selection
SENSOR Target time	14 min.
PRE-CONDITIONING Time	2 min.
POST-CONDITIONING Time	2 min.


Enter time



Time display mode	12/24 hours
Summer / Winter time	Summer or winter time
Enter the date	
Enter button tones	
Button tone volume	
Cleaning confirmation	
Login on the interior display	On <input checked="" type="checkbox"/> / Off <input type="checkbox"/>
Service message after the fan run-on	On <input checked="" type="checkbox"/> / Off <input type="checkbox"/>
Enter emergency shut-down time	On <input checked="" type="checkbox"/> / Off <input type="checkbox"/>
TWIN PERFORMANCE	On <input checked="" type="checkbox"/> / Off <input type="checkbox"/>
Active time customer settings	0-600 sec.
Program selection	33 min
Set the same time as the time-control unit	
Time before tanning only with LED BEAUTY LIGHT	Intensive, medium, sensitive, without pre-selection
Time after tanning only with LED BEAUTY LIGHT	




Enter time

Time			
1	2	3	
4	5	6	
7	8	9	
0	<input type="button" value="←"/>		<input checked="" type="checkbox"/>
Enter time			
- - : - -			

- Enter the time via the keypad; the time entered is confirmed with ; the time entered is corrected with .

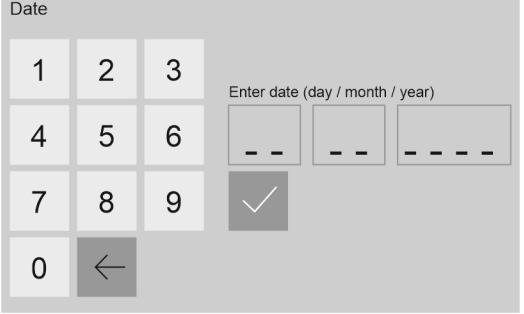Default setting	Description
Menu 01: DISPLAY AND OPERATION Time display mode	<ul style="list-style-type: none"> – Select by tapping.
	<p>NOTE: After selection, the display changes back to the submenu. Basic setting: 24h</p>
Enter the date	<ul style="list-style-type: none"> – Enter the date via the keypad; the date entered is confirmed with ; the date entered is corrected with .
	<p>NOTE: After selection, the display changes back to the submenu. Basic setting: Summer mode</p>
Enter button tones	<ul style="list-style-type: none"> – Enter 1, 2 or 3 via the keypad. – Confirm the button tone selection with . <p>Basic setting: 1</p>

  Default setting	Description
Menu 01: DISPLAY AND OPERATION	
Button tone volume	<p>– Move the slider to change the volume of the button tones (0-10). Basic setting: 8</p>
	
Cleaning confirmation	<p>– Move the slider to activate the function <input checked="" type="checkbox"/> or deactivate the function <input type="checkbox"/>. Basic setting: deactivated</p>
	
PSM login on the interior display	<p>– Move the slider to activate the function <input checked="" type="checkbox"/> or deactivate the function <input type="checkbox"/>. Basic setting: 8</p>
	
Display service message	<p>– Move the slider to activate the function <input checked="" type="checkbox"/> or deactivate the function <input type="checkbox"/>. Basic setting: deactivated</p>
	

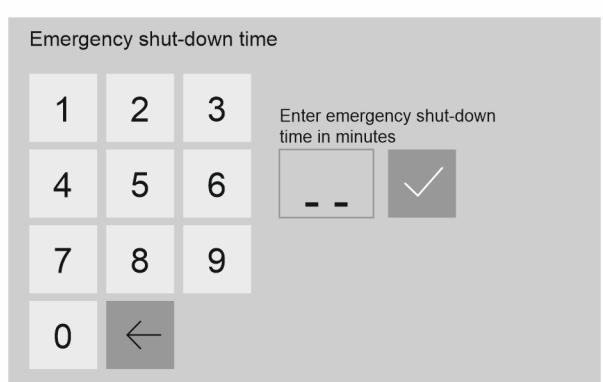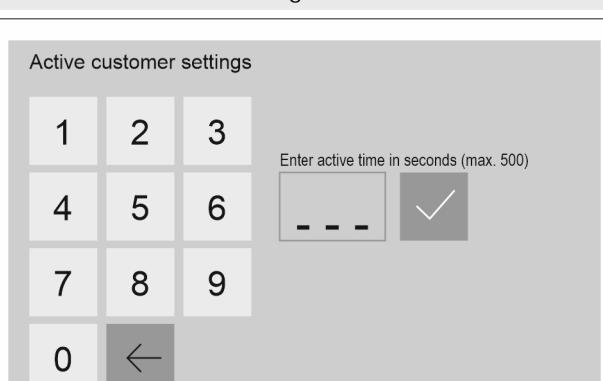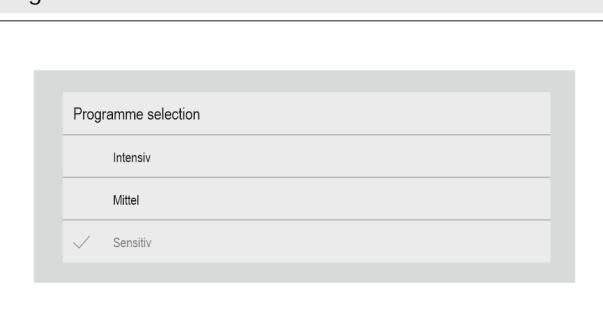Default setting	Description
<p>Menu 01: DISPLAY AND OPERATION</p> <p>Enter emergency shut-down time</p> 	<ul style="list-style-type: none"> Enter the emergency shut-down time via the keypad; the time entered is confirmed with <input checked="" type="checkbox"/>; the time entered is corrected with <input type="button" value="←"/>. <p>NOTE: The unit switches off if 30 minutes are exceeded (emergency off function). Basic setting: 30 minutes or the max. permissible emergency shut-down time of the unit.</p>
<p>Active time customer settings</p> 	<ul style="list-style-type: none"> Enter the active time customer settings via the keypad; the time entered is confirmed with <input checked="" type="checkbox"/>; the time entered is corrected with <input type="button" value="←"/>. <p>NOTE: The user's pre-settings and sensor measurement data are discarded after this time. Basic setting: 180 sec.</p>
<p>Program selection</p> 	<ul style="list-style-type: none"> Select by tapping. <p>NOTE: After selection, the display changes back to the submenu. Basic setting: without pre-setting</p>

Default setting

Description

Menu 01: DISPLAY AND OPERATION

SENSOR target time



- Enter the SENSOR target time via the keypad; the time entered is confirmed with ; the time entered is corrected with .



NOTE: The SENSOR target time should be the same as the time set in the time-control unit.

PRE-CONDITIONING time

- Enter the PRE-CONDITIONING time via the keypad; the time entered is confirmed with ; the time entered is corrected with .



NOTE: Setting for the period of time before tanning in which only the BEAUTY LIGHT LEDs are active. The set time is deducted from the SENSOR target time. The tanning dosage remains unaffected by this.


POST-CONDITIONING time

- Enter the POST-CONDITIONING time via the keypad; the time entered is confirmed with ; the time entered is corrected with .


Default setting

Description

Menu 02 VIDEOS & IMAGES

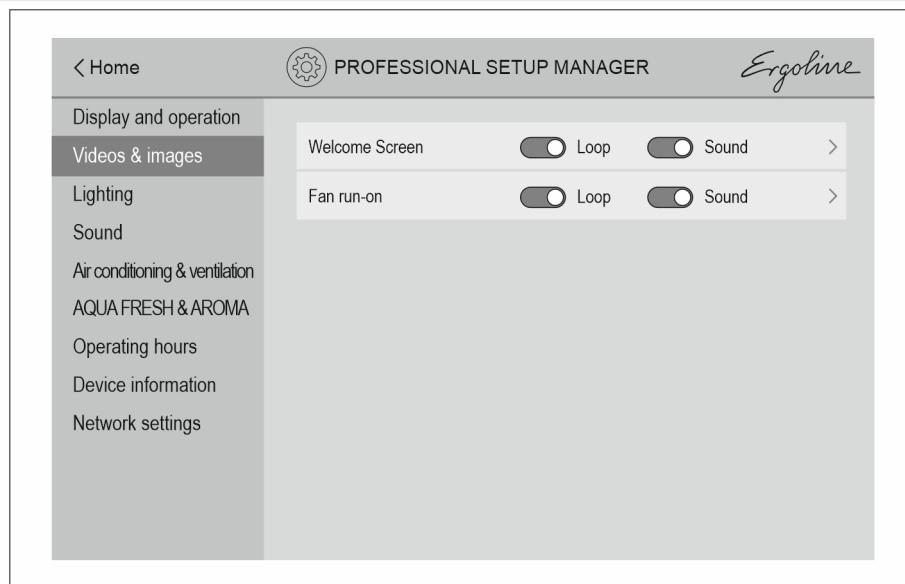

Welcome screen Ergoline image/video

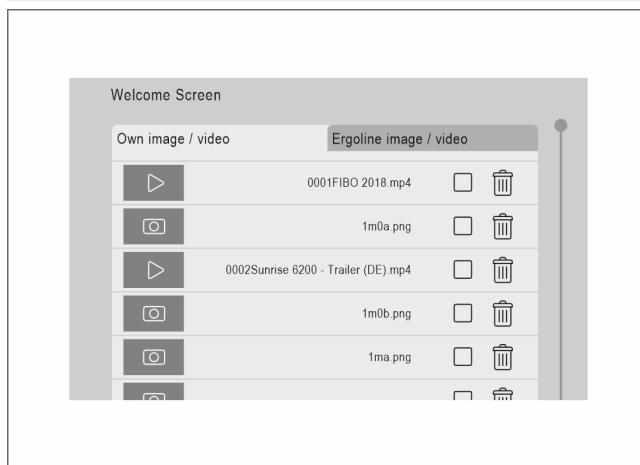

NOTE:


By pressing the Register button, you can switch between your own files and Ergoline files.

- Tap to select and activate a video file or image file.

Delete data:

- Tapping selects the file, which can be deleted by tapping .

Welcome screen own image/video

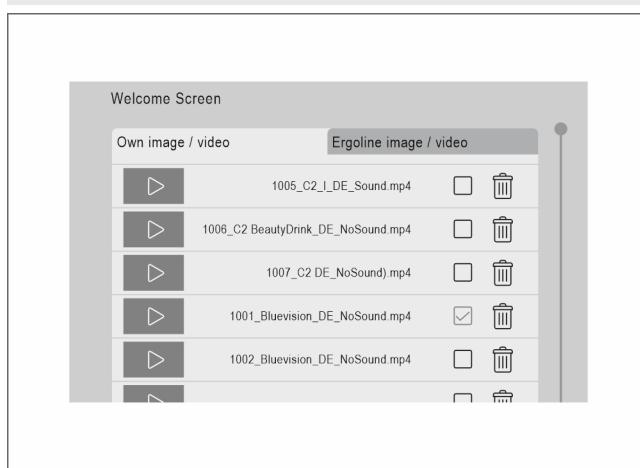

- Tap to select and activate a video file or image file.

Delete data:

- Tapping selects the file, which can be deleted by tapping .

Default setting

Description

Menu 02 VIDEOS & IMAGES

Fan run-on screen



- Tap to select and activate a video file or image file.

Delete data:

- Tapping selects the file, which can be deleted by tapping .




NOTE:

Further information on the topic 'Adding own videos' can be found on the Global Service homepage in the section TECHNOLOGY.


Default setting

Description

Menu 03 LIGHTING

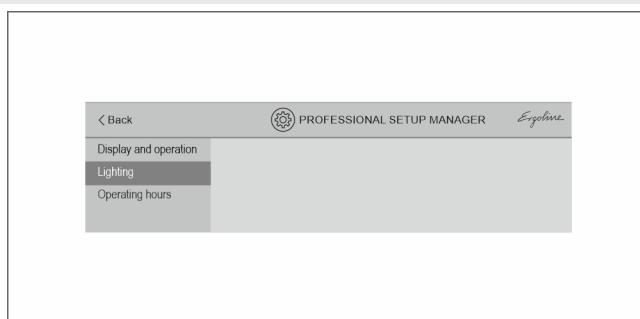

Setting options

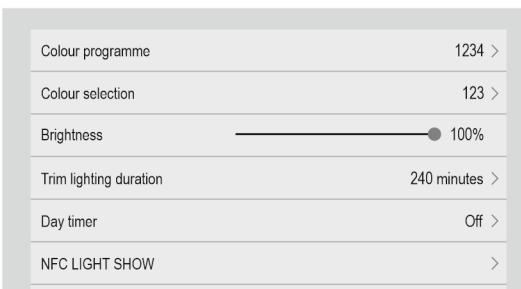

Color program

Selection of a static color

Set the brightness of the color.


Runtime of the LED lighting according to the tanning

The time from when to when the accent lighting is switched on can be defined for each day of the week (Monday to Sunday).

Color program

Select a preset or custom-designed program.

Tap or to change the value.

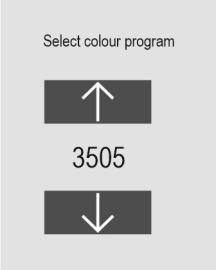


Default setting

Description

Menu 03 LIGHTING

Color selection

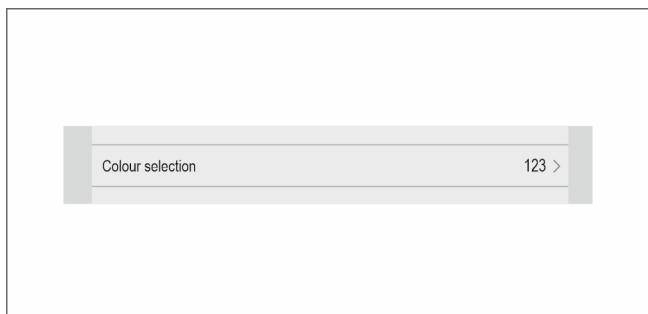


- Select the color program by pressing and sliding.




NOTE:

When changing, the color changes immediately.

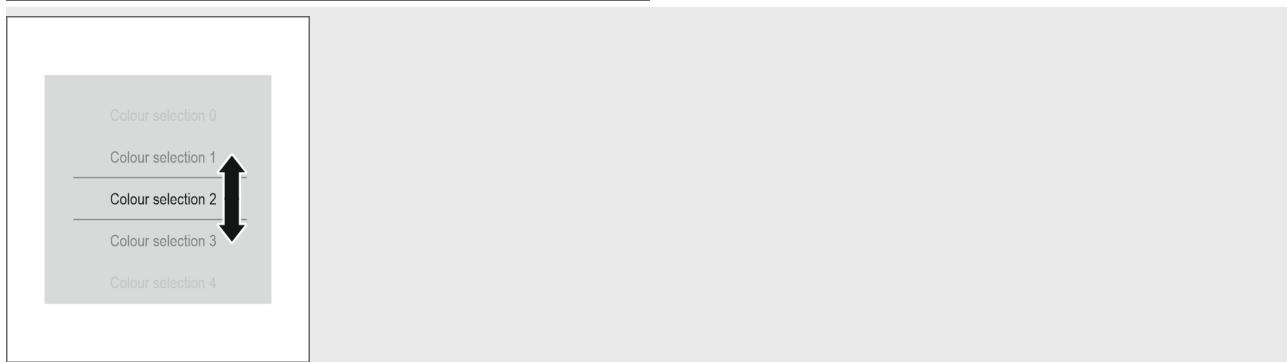


Brightness

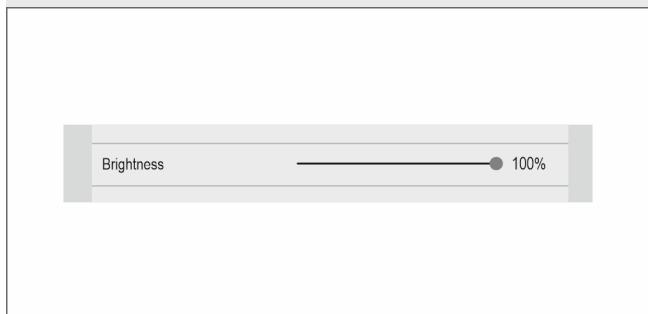

By moving the slider, you can change the brightness of the LED lighting (20%, 40%, 60%, 80% and 100%).
Basic setting: 100%

Trim lighting duration

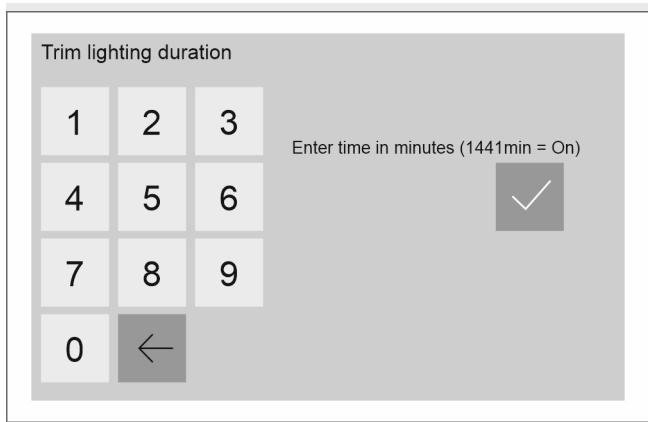


- Enter the trim lighting duration via the keypad; the duration entered is confirmed with ; the duration entered is corrected with .



NOTE:

The lighting is switched on continuously when selecting 1441 minutes.


Basic setting: 240 minutes

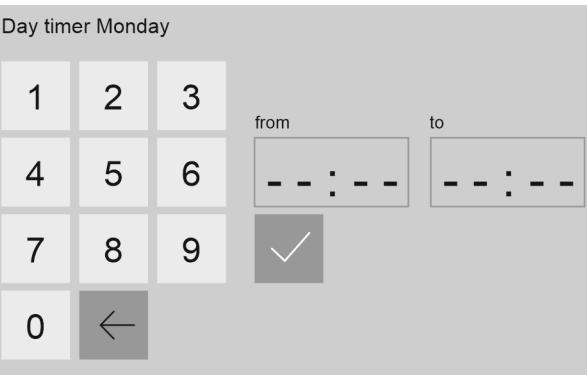Default setting	Description
Menu 03 LIGHTING	
Day timer	<ul style="list-style-type: none"> – Move the slider to activate the function. 
	<p>When the day timer is activated, the time from when to when the accent lighting is switched on can be defined for each day of the week (Monday to Sunday).</p>
	<p> NOTE: After selection, the display changes back to the sub-menu.</p>
	<p>Enter the time via the keypad; the time entered is confirmed with ; the time entered is corrected with .</p> <p> NOTE: This step must be repeated for each day of the week (Monday to Sunday).</p>


Default setting

Description

Menu 04 SOUND

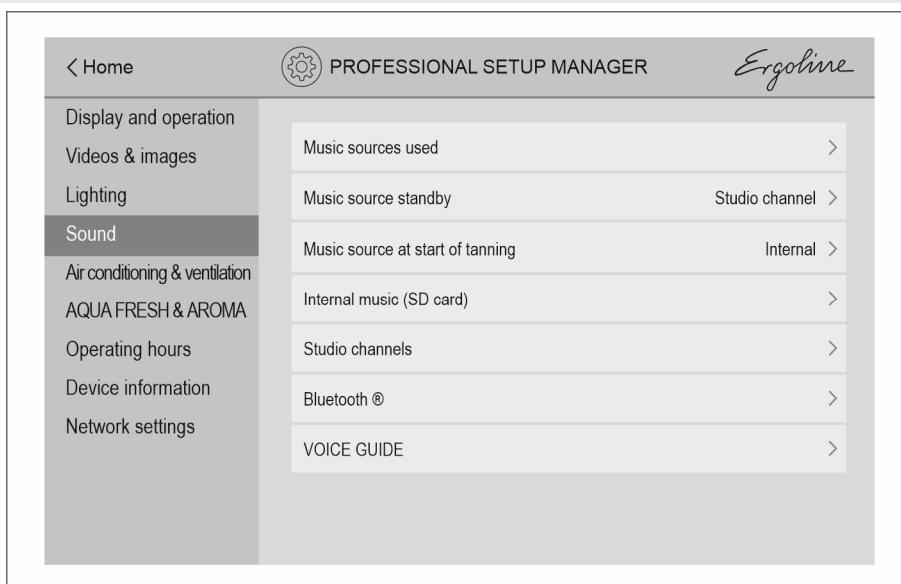


Music sources used

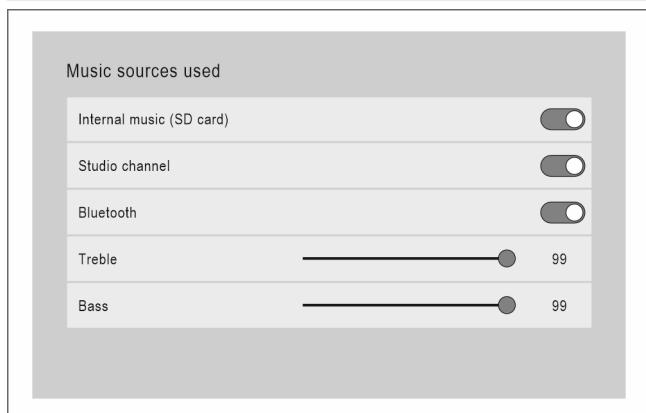

- Move the slider to activate the function or deactivate the function .

Basic setting: deactivated

Music source standby

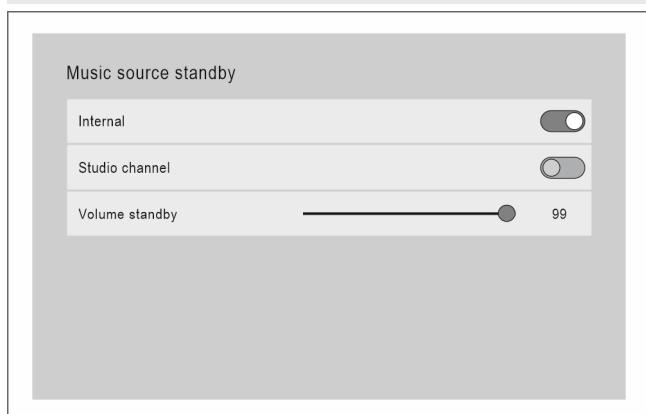


- Move the slider to activate the function or deactivate the function .

Basic setting: deactivated

Default setting

Menu 04 SOUND

Music source at start of tanning

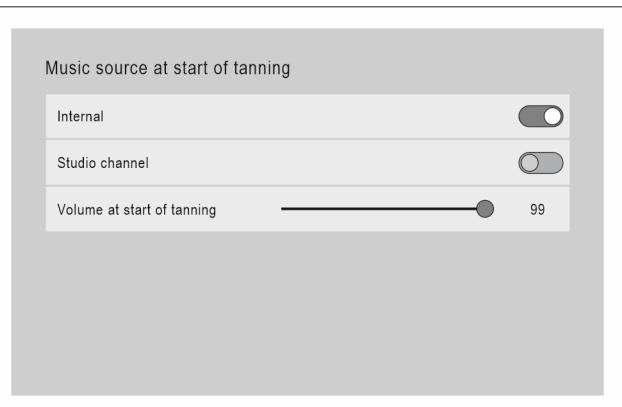


Description

- Move the slider to activate the function or deactivate the function .

Basic setting: deactivated




Internal music (SD card)

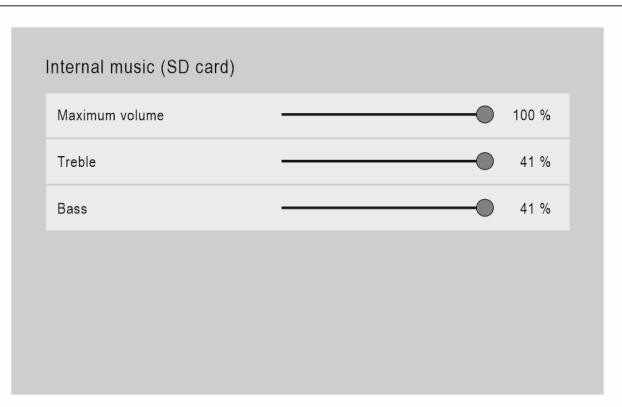

- Move the slider to activate the function or deactivate the function .

Basic setting: deactivated

Studio channels

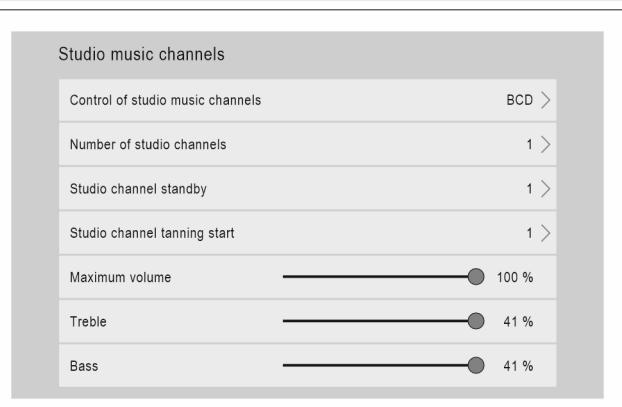

- Select by tapping.

Default setting	Description
-----------------	-------------

Menu 04 SOUND

Control of the studio channels



Control of studio music channels

✓ BCD
Decimal
Pulse

- Select by tapping.

Number of studio channels

Number of studio channels

1	2	3
4	5	6
7	8	9
0	<input type="button" value="☒"/>	

Enter the number of studio channels.
(Max. 16)

— —

- Enter the number of studio channels via the keypad; the entry is confirmed with ; the entry is corrected with .

Studio channel standby

Studio channel standby

1	2	3
4	5	6
7	8	9
0	<input type="button" value="☒"/>	

Enter studio channel


— —

- Enter the studio channel in standby via the keypad; the entry is confirmed with ; the entry is corrected with .

Default setting

Menu 04 SOUND

Studio channel tanning

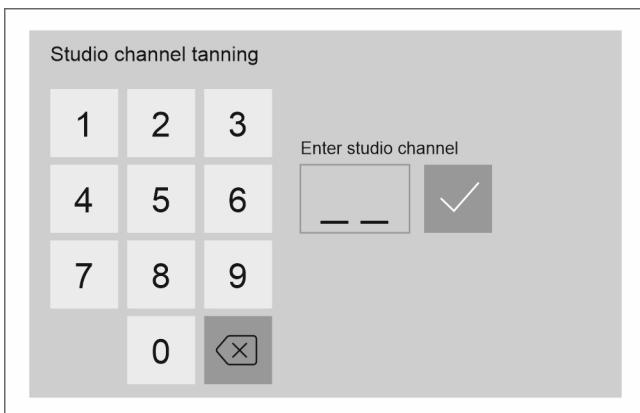


Description

- Enter the number of the 'Tanning' studio channel via the keypad; the entry is confirmed with ; the entry is corrected with .




Bluetooth® settings

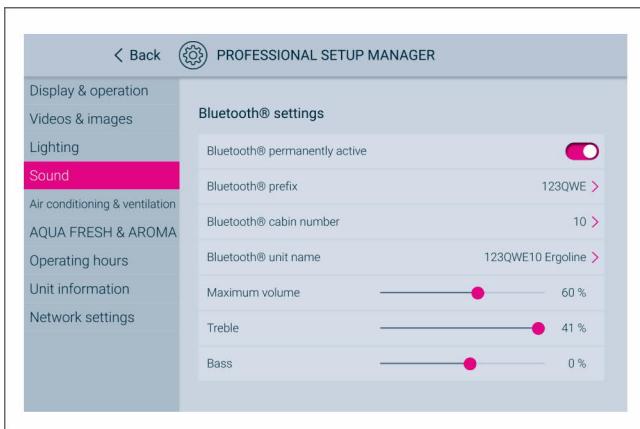


- Move the slider to activate the function or deactivate the function .


Bluetooth® cabin number

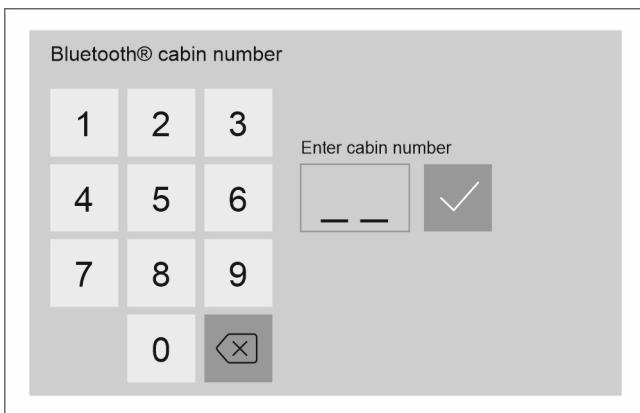

- Enter the cabin numbers via the keypad; the entry is confirmed with ; the entry is corrected with .

Default setting	Description
Menu 04 SOUND	
<p>Bluetooth® unit name</p> 	<ul style="list-style-type: none"> Enter the Bluetooth® unit name via the keypad; the entry is confirmed with ok; the entry is corrected with cancel.

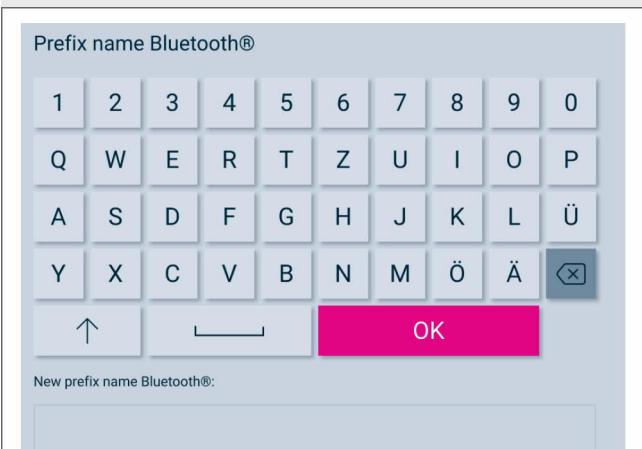
<p>Bluetooth® pre-fix name</p> 	<ul style="list-style-type: none"> Enter the Bluetooth® pre-fix name via the keypad; the entry is confirmed with ok; the entry is corrected with cancel.
---	---
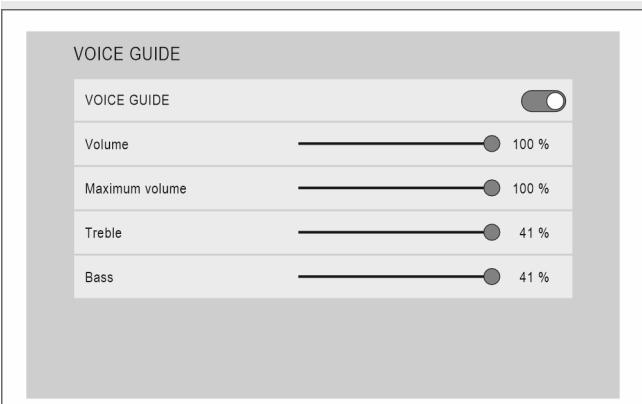
<p>VOICE GUIDE</p> 	<ul style="list-style-type: none"> Move the slider to activate the function on or deactivate the function off.
--	---


Description

Default setting

Menu 05 AIR CONDITIONING & VENTILATION

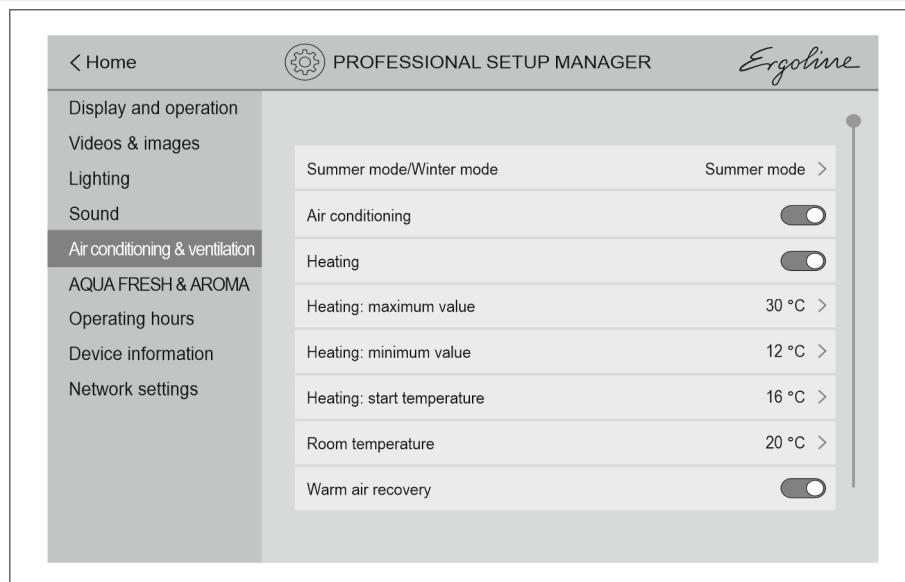

Setting options

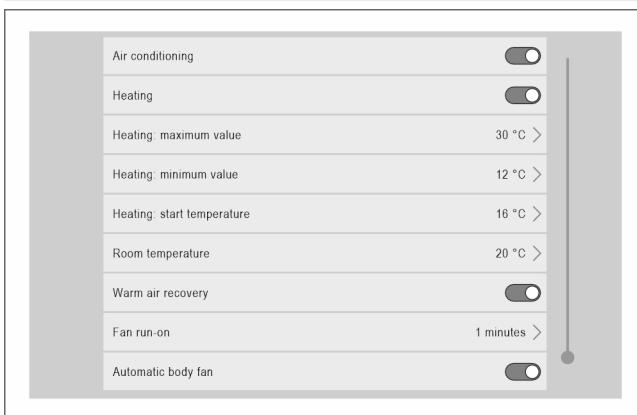

Activate by tapping.

Activate by tapping.

The operating hours are displayed and can be reset.

Activate by tapping.

Activate by tapping.


The operating hours are displayed and can be reset.

Activate by tapping.

The operating hours are displayed and can be reset.

Activate by tapping.

Winter / Summer mode

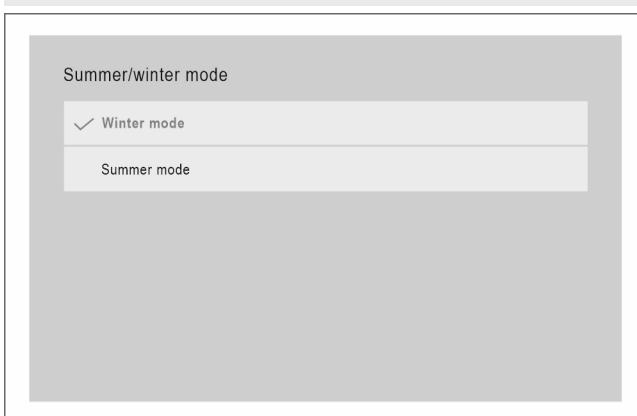

Select by tapping.

Description

Default setting

Menu 05 AIR CONDITIONING & VENTILATION

Heating: maximum value



Heating: maximum value

1	2	3
4	5	6
7	8	9
0	<input type="button" value="✖"/>	

Temperature in °C (default 30°C)

- Enter the maximum value of the temperature for the heating via the keypad; the entry is confirmed with ; the entry is corrected with .

Heating: minimum value

Heating: minimum value

1	2	3
4	5	6
7	8	9
0	<input type="button" value="✖"/>	

Temperature in °C (default 18°C)

- Enter the minimum value of the temperature for the heating via the keypad; the entry is confirmed with ; the entry is corrected with .

Heating: start temperature

Heating: start temperature

1	2	3
4	5	6
7	8	9
0	<input type="button" value="✖"/>	

Temperature in °C (default 20°C)

- Enter the start temperature for the heating via the keypad; the entry is confirmed with ; the entry is corrected with .

Description	Default setting
-------------	-----------------

Menu 05 AIR CONDITIONING & VENTILATION

Room temperature

Heating: start temperature

1	2	3
4	5	6
7	8	9
0		

Temperature in °C (default 20°C)

- Enter the room temperature via the keypad; the entry is confirmed with ; the entry is corrected with .



Fan run-on

Fan run-on

1	2	3
4	5	6
7	8	9
0		

Time in minutes (default 3 minutes)


 

- Enter the minutes for the fan run-on via the keypad; the entry is confirmed with ; the entry is corrected with .


Default setting

Description

Menu 06 AQUA FRESH & AROMA

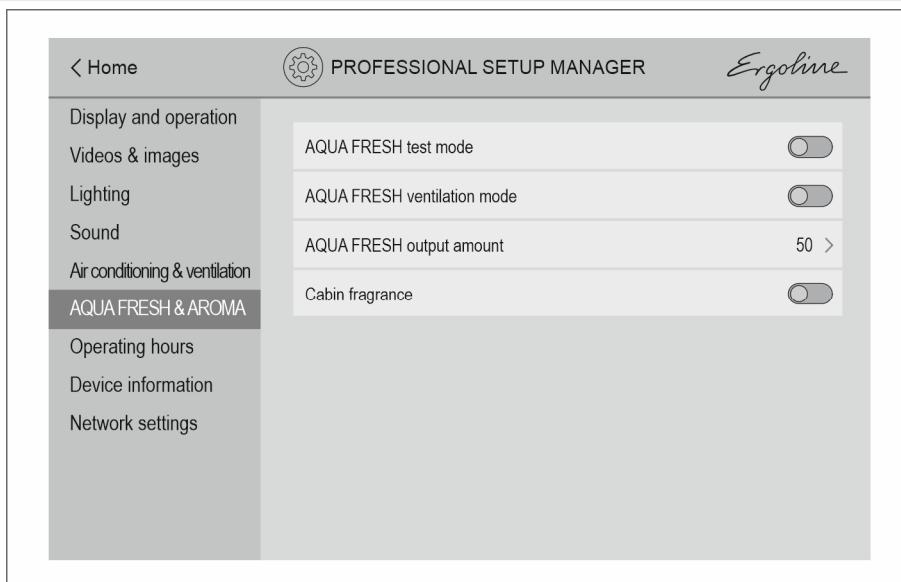

Setting options

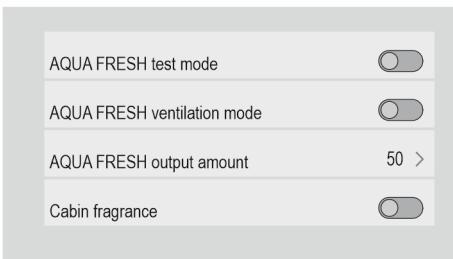


Activate by tapping.

Activate by tapping.

The operating hours are displayed and can be reset.

Activate by tapping.

AQUA FRESH output amount

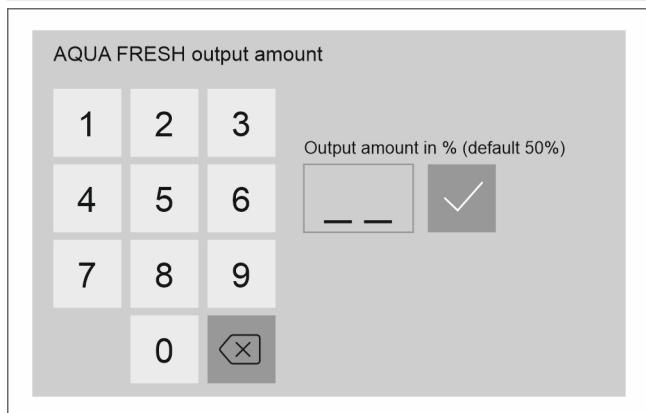

- Enter the output amount via the keypad; the entry is confirmed with ; the entry is corrected with .

Default setting

Description

Menu 07 OPERATING HOURS

Reset operating hours

The operating hours are displayed.
The operating hours are displayed.

The operating hours are displayed and can be reset.

The operating hours are displayed and can be reset.

The operating hours are displayed and can be reset.

The operating hours are displayed and can be reset.

The operating hours are displayed.

The operating hours are displayed and can be reset.

The operating hours are displayed and can be reset.

The operating hours are displayed and can be reset.

Total operating hours

The operating hours are only displayed.

Default setting

Menu 07 OPERATING HOURS

Reset total operating hours



Reset total operating hours


Reset total operating hours? Press and hold button for 5 seconds.



Description


The setting can be reset with .

Operating hours low pressure type A

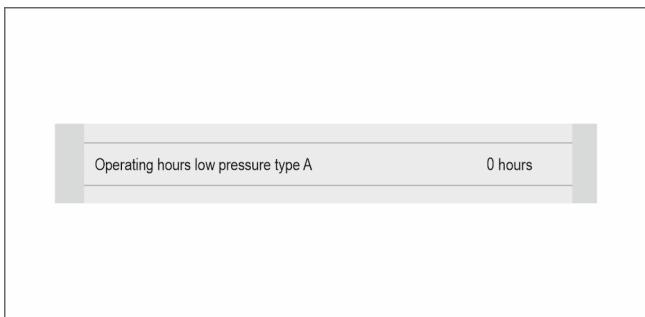


The operating hours are only displayed.

Operating hours low pressure type B

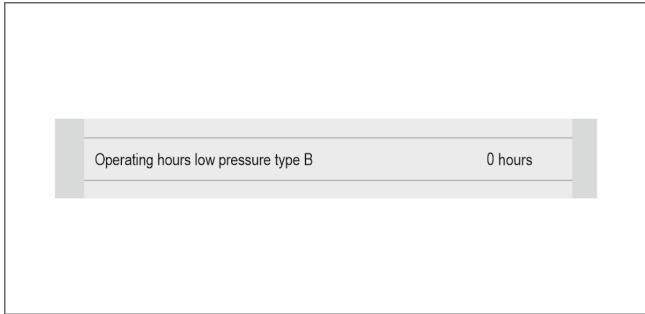

The operating hours are only displayed.

Operating hours low pressure




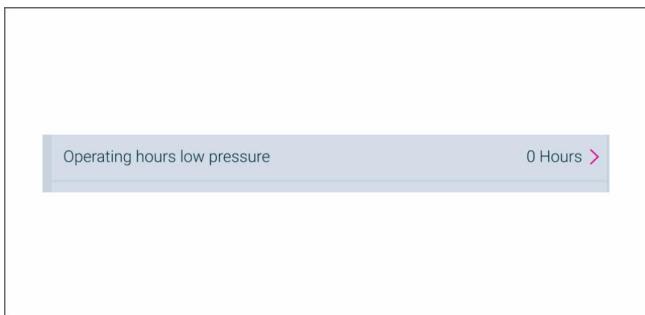


The operating hours are only displayed.

Operating hours low pressure 0 Hours

Replacement interval 

Reset operating hours 

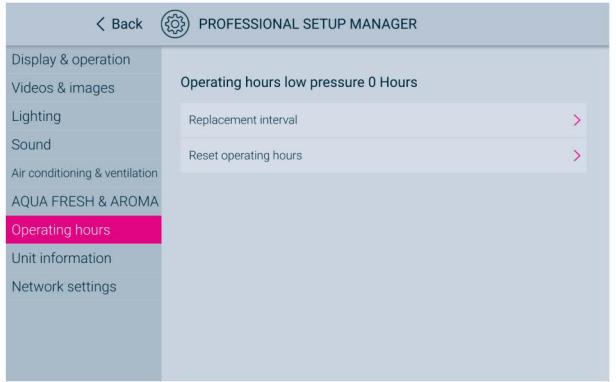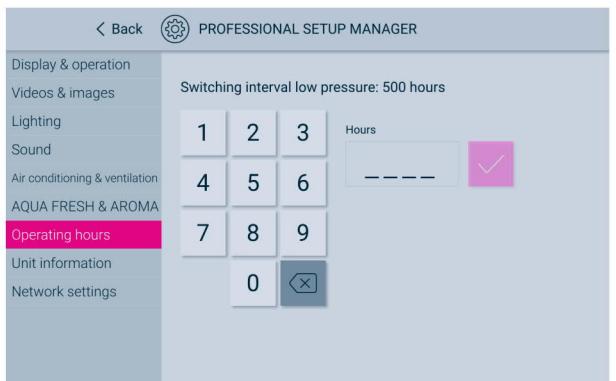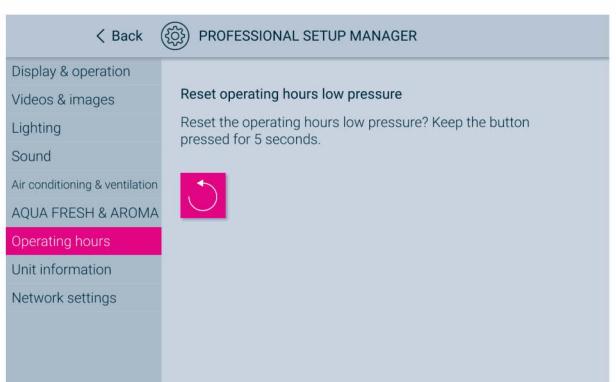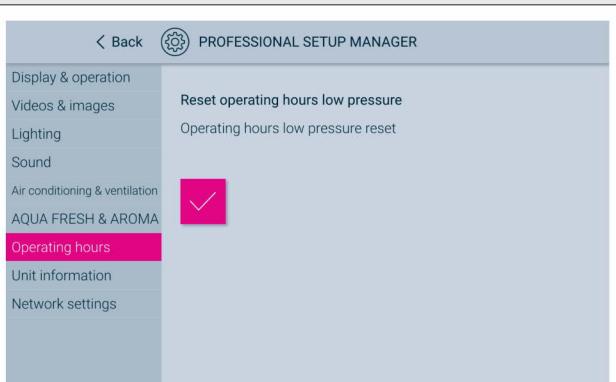Default setting	Description
Menu 07 OPERATING HOURS	
Operating hours low pressure	
	
	
	
	

Default setting	Description												
Menu 07 OPERATING HOURS Facial tanner operating hours													
 <div style="border: 1px solid #ccc; padding: 10px; text-align: center;"> <p>Facial tanner operating hours</p> <p>0 hours</p> </div>	The operating hours are only displayed.												
<div style="border: 1px solid #ccc; padding: 10px; text-align: center;"> <p>Facial tanner operating hours 93 hours</p> <p>Replacement interval ></p> <p>Reset operating hours ></p> </div>	The operating hours are displayed and can be reset. The replacement interval can be set here. Operating hours can be reset here.												
<div style="border: 1px solid #ccc; padding: 10px; text-align: center;"> <p>Replacement interval ></p> </div>													
<div style="border: 1px solid #ccc; padding: 10px; text-align: center;"> <p>Replacement interval facial tanner</p> <table border="1" style="margin-bottom: 10px; border-collapse: collapse;"> <tr> <td style="padding: 5px;">1</td> <td style="padding: 5px;">2</td> <td style="padding: 5px;">3</td> </tr> <tr> <td style="padding: 5px;">4</td> <td style="padding: 5px;">5</td> <td style="padding: 5px;">6</td> </tr> <tr> <td style="padding: 5px;">7</td> <td style="padding: 5px;">8</td> <td style="padding: 5px;">9</td> </tr> <tr> <td style="padding: 5px;">0</td> <td style="padding: 5px; text-align: center;">←</td> <td></td> </tr> </table> <p>Enter time in hours</p> <div style="border: 1px solid #ccc; width: 100px; height: 25px; margin-bottom: 5px;"></div> <div style="display: flex; align-items: center;"> ✓ </div> </div>	1	2	3	4	5	6	7	8	9	0	←		<ul style="list-style-type: none"> – Enter the facial tanner replacement interval via the keypad; the entry is confirmed with ✓; the entry is corrected with ←. <div style="display: flex; align-items: center; margin-top: 10px;">  NOTE: </div> <p>The replacement interval is specified in the operating instructions in chapter 'Maintenance plan'.</p>
1	2	3											
4	5	6											
7	8	9											
0	←												

Default setting	Description											
Menu 07 OPERATING HOURS												
<p>Facial tanner operating hours</p> <div data-bbox="214 348 817 729"> <p>Reset facial tanner operating hours</p> <p>Reset facial tanner operating hours? Press and hold button for 5 seconds.</p>  </div>	<p>Reset facial tanner operating hours.</p> <p>The setting can be reset with .</p> 											
<p>Shoulder tanner operating hours</p> <div data-bbox="214 819 817 1111"> <p>Shoulder tanner operating hours 0 hours ></p> </div>	<p>The operating hours are displayed and can be reset.</p>											
<div data-bbox="214 1190 817 1437"> <p>Shoulder tanner operating hours 0 hours</p> <p>Replacement interval ></p> <p>Reset operating hours ></p> </div>	<p>The replacement interval can be set here.</p> <p>Operating hours can be reset here.</p>											
<p>Replacement interval, shoulder tanner: 500 hours</p> <div data-bbox="214 1516 817 1852"> <table border="1" data-bbox="230 1538 452 1830"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td>9</td></tr> <tr><td>0</td><td></td></tr> </table> <p>Hours <input type="text" value="500"/> </p> </div>	1	2	3	4	5	6	7	8	9	0		<ul style="list-style-type: none"> Enter the shoulder tanner replacement interval via the keypad; the entry is confirmed with ; the entry is corrected with . <p> NOTE: The replacement interval is specified in the operating instructions in chapter 'Maintenance plan'.</p>
1	2	3										
4	5	6										
7	8	9										
0												

Default setting

Description

Menu 07 OPERATING HOURS

Shoulder tanner operating hours



Shoulder tanner operating hours 92 hours

Replacement interval >

Reset operating hours >

The setting can be reset with

Reset shoulder tanner operating hours

Reset shoulder tanner operating hours? Press and hold button for 5 seconds.



Filter operating hours

The operating hours are displayed and can be reset.

Filter operating hours

0 hours >

The replacement interval can be set here.
Operating hours can be reset here.

Filter operating hours 0 hours

Replacement interval >


Reset operating hours >

Default setting

Description

Menu 07 OPERATING HOURS

Filter operating hours


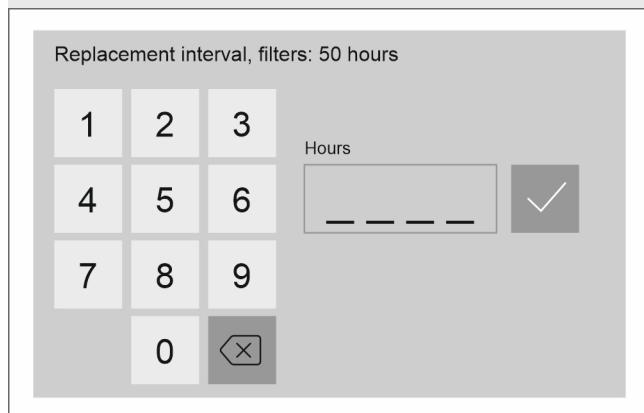


- Enter the replacement interval for the filter via the keypad; the entry is confirmed with ; the entry is corrected with .



NOTE:

The replacement interval is specified in the operating instructions in chapter 'Maintenance plan'.

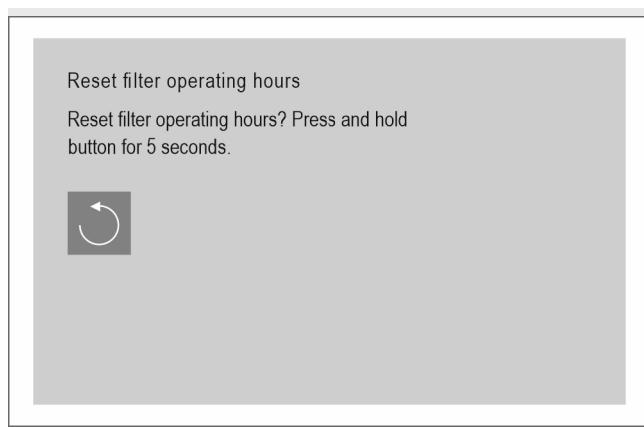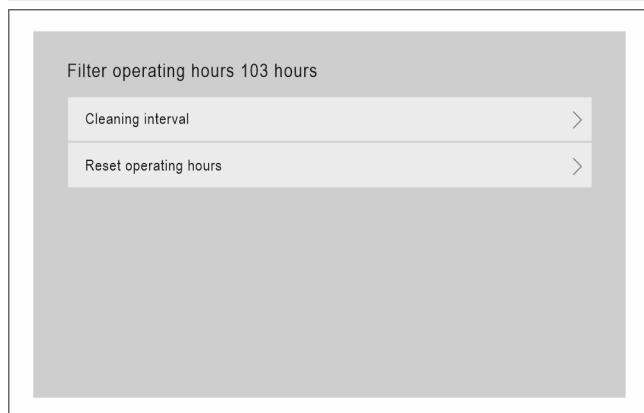

The setting can be reset with

Default setting	Description												
Menu 07 OPERATING HOURS Operating hours air conditioning system	The operating hours are displayed and can be reset.												
 <div data-bbox="165 451 700 527"> <p>Air conditioning operating hours</p> <p>0 hours ></p> </div>													
<div data-bbox="165 729 700 887"> <p>Air conditioning operating hours 0 hours</p> <p>Replacement interval ></p> <p>Reset operating hours ></p> </div>	<p>The replacement interval can be set here. Operating hours can be reset here.</p>												
<div data-bbox="165 1010 700 1358"> <p>Replacement interval, air conditioning: 50 hours</p> <table border="1" data-bbox="165 1066 373 1358"> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td>9</td></tr> <tr><td>0</td><td></td><td></td></tr> </table> <p>Hours <input type="text" value="50"/> </p> </div>	1	2	3	4	5	6	7	8	9	0			<ul style="list-style-type: none"> Enter the replacement interval for the filter via the keypad; the entry is confirmed with ; the entry is corrected with . <p> NOTE: The replacement interval is specified in the operating instructions in chapter 'Maintenance plan'.</p>
1	2	3											
4	5	6											
7	8	9											
0													
<div data-bbox="165 1448 700 1605"> <p>Air conditioning operating hours 90 hours</p> <p>Cleaning interval ></p> <p>Reset operating hours ></p> </div>													

Default setting	Description												
Menu 07 OPERATING HOURS													
<p>Operating hours air conditioning system</p> <div data-bbox="212 345 816 720"> <p>Reset air conditioning operating hours Reset air conditioning operating hours? Press and hold button for 1 seconds.</p>  </div>	<p>The setting can be reset with .</p> 												
<p>AROMA operating hours</p> <div data-bbox="212 795 816 1114"> <p>AROMA operating hours 0 hours ></p> </div>	<p>The operating hours are displayed and can be reset.</p>												
<p>Replacement interval AROMA</p> <div data-bbox="212 1172 816 1518"> <table border="1" data-bbox="212 1208 441 1500"> <tr> <td>1</td><td>2</td><td>3</td></tr> <tr> <td>4</td><td>5</td><td>6</td></tr> <tr> <td>7</td><td>8</td><td>9</td></tr> <tr> <td>0</td><td></td><td></td></tr> </table> <p>Enter time in hours <input type="text" value="-----"/> </p> </div>	1	2	3	4	5	6	7	8	9	0			<p>The replacement interval can be set here. Operating hours can be reset here.</p> <ul style="list-style-type: none"> Enter the replacement interval for AROMA via the keypad; the entry is confirmed with ; the entry is corrected with . <p> NOTE: The replacement interval is specified in the operating instructions in chapter 'Maintenance plan'.</p>
1	2	3											
4	5	6											
7	8	9											
0													
<p>Reset air conditioning AROMA operating hours Reset the operating hours AROMA? Keep the button pressed for 5 seconds.</p> 	<p>The setting can be reset with .</p>												

Default setting

Menu 07 OPERATING HOURS

AQUA FRESH operating hours

Description

AQUA FRESH operating hours

0 hours >

The operating hours are displayed and can be reset.
The replacement interval can be set here.

AQUA FRESH operating hours 0 hours

Replacement interval

>

Reset operating hours

>

Operating hours can be reset here.

- Enter the replacement interval for AQUA FRESH via the keypad; the entry is confirmed with ; the entry is corrected with .



NOTE:

The replacement interval is specified in the operating instructions in chapter 'Maintenance plan'.

Reset AQUA FRESH operating hours

Reset the operating hours AQUA FRESH? Keep the button pressed for 5 seconds.




The setting can be reset with .

Default setting

Description

Menu 08 UNIT INFORMATION

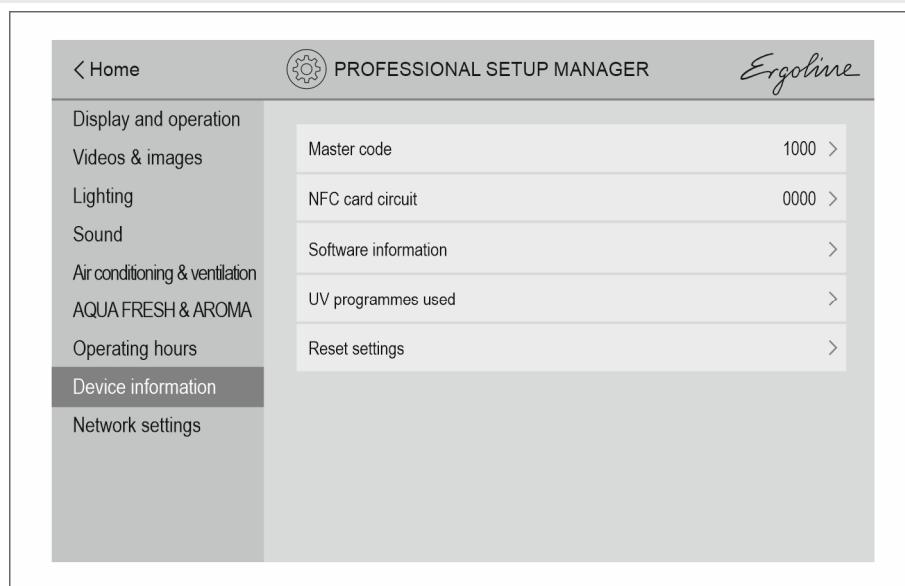

Enter the master code

Enter master code

1	2	3	A	B
4	5	6	C	D
7	8	9	E	F
0				

Change master code

- Enter the master code via the keypad; the entry is confirmed with ; the entry is corrected with .

The setting can be reset with .

Enter the NFC card circuit

Enter NFC card circuit

1	2	3	A	B
4	5	6	C	D
7	8	9	E	F
0				

Change NFC card circuit

- Enter the NFC card circuit via the keypad; the entry is confirmed with ; the entry is corrected with .

The setting can be reset with .

Default setting

Description

Menu 08 UNIT INFORMATION

Setting options



Control	1509979	V1.103
Nodes	1509787	V1.1
Nodes	1510965	V1.0
Nodes	1510965	V1.0
Control Center	1510984	V1.93
Button tone	1511225	V1.1
Bluetooth®	1510445	V1.1
Language control	1511409	V1.0
Device passport	1510362	V1.2

Device passport	1510362	V1.2
Facial tanner fan controller	1510964	V1.1
Expansion controller	1510963	V1.3
Control unit	1510983	V0.93
Audio-Controller	1511227	V200.21
Watchdog	1509898	V1.22
LED controller 1	1510384	V1.5
LED controller 2	1510384	V1.5
Language version		Deutsch

UV programs used

UV programmes used

SENSITIVE	18
MEDIUM	87
INTENSIVE	234
Reset	>

Reset: Activate by tapping on the sub-menu 'Reset UV programs'.

Default setting	Description	
Menu 08 UNIT INFORMATION		
Reset the UV program	<p>Reset UV programms used</p> <p>Do you want to reset the UV programs used? Press and hold button for 5 seconds.</p> 	<p>The setting can be reset with .</p> 
Reset settings	<p>Reset all settings to factory defaults</p> <p>Do you want to reset all default settings? Press the button for 5 seconds.</p> 	<p>The setting can be reset with .</p>

UPDATE CODE



 NOTE:
Information for customer service.

Default setting

Description

Menu 08 UNIT INFORMATION

CONTENT SPACE



NOTE:

Information for customer service.



- Delete: Tap  to delete the file from the SD-CARD.



NOTE:

Deleting files enables you to change the SD-CARD's storage capacity.

Legal information and licenses




Tapping the text fields enables the legal information and licenses to be opened.




Default setting

Description


Menu 09 NETWORK SETTINGS

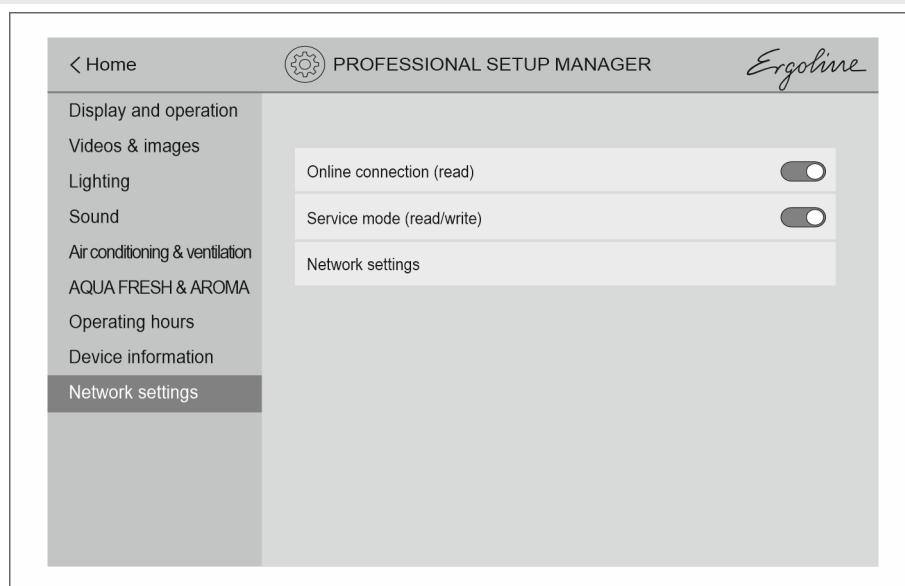

Network settings

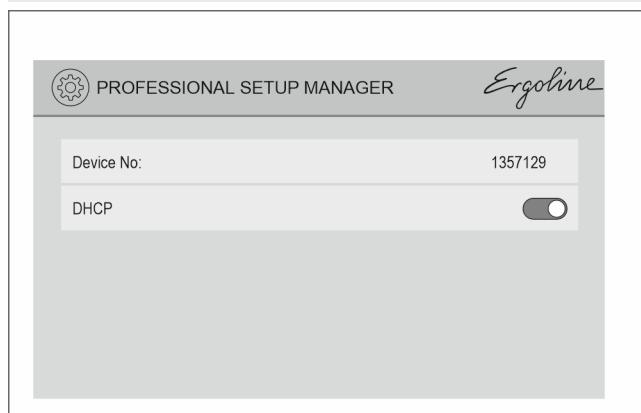

DHCP

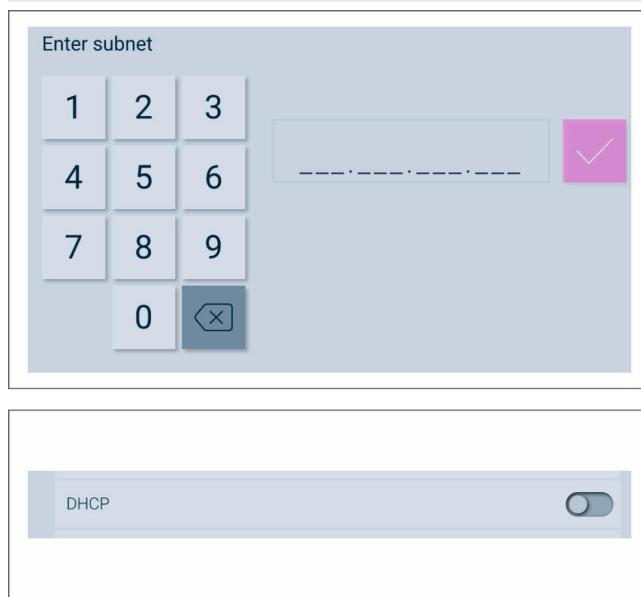

- Move the slider to activate the function or deactivate the function .

Basic setting: activated


- Move the slider to activate the function or deactivate the function .


Basic setting: activated





NOTE:

Use DHCP to receive an automatic IP address from your network system. When DHCP is active, no manual network settings can be configured.

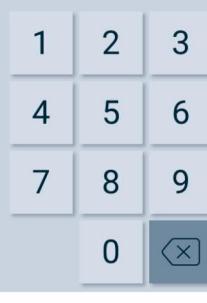Default setting	Description
Menu 09 NETWORK SETTINGS IP address	<ul style="list-style-type: none"> Enter the IP address via the keypad; the entry is confirmed with ; the entry is corrected with .
 <div data-bbox="134 359 754 707"> <p>Enter IP address</p>  <p>1 2 3 4 5 6 7 8 9 0 </p> <p>----- </p> </div>	<p> NOTE:</p> <p>The IP address can only be entered manually when DHCP is deactivated.</p>
SUB-Net	<ul style="list-style-type: none"> Enter the SUB-Net address via the keypad; the entry is confirmed with ; the entry is corrected with .
 <p>Enter subnet</p> <p>1 2 3 4 5 6 7 8 9 0 </p> <p>----- </p>	<p> NOTE:</p> <p>The SUB-Net address can only be entered manually when DHCP is deactivated.</p>
Standard gateway	<ul style="list-style-type: none"> Enter the standard gateway address via the keypad; the entry is confirmed with ; the entry is corrected with .
 <p>Enter standard gateway</p> <p>1 2 3 4 5 6 7 8 9 0 </p> <p>----- </p>	<ul style="list-style-type: none"> Enter the preferred DNS server address via the keypad; the entry is confirmed with ; the entry is corrected with .

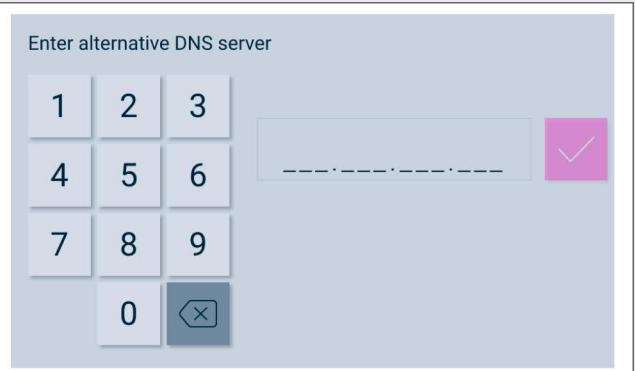Default setting	Description
Menu 09 NETWORK SETTINGS Alternative DNS server	<p>Enter alternative DNS server</p>  <ul style="list-style-type: none"> Enter the alternative DNS server address via the keypad; the entry is confirmed with ; the entry is corrected with .

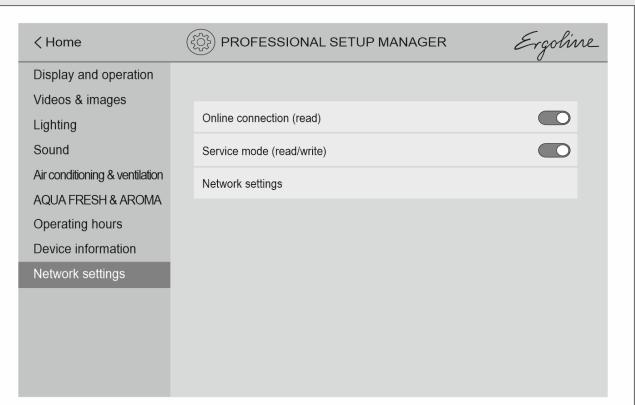Service mode, REMOTE SERVICE	 <p> NOTE: REMOTE SERVICE can be used as soon as the network settings are complete or DHCP is deactivated. Further information is available from our customer service / technical service team (see page 2).</p>
------------------------------	---

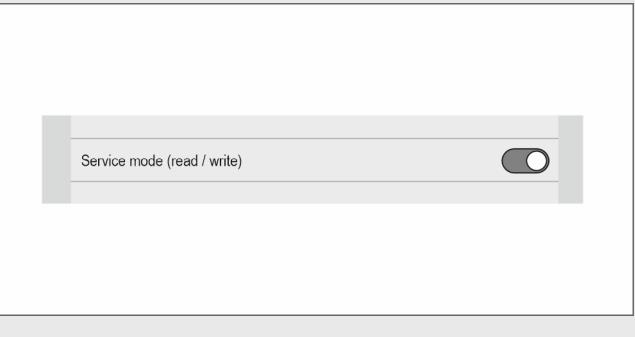Online connection	 <ul style="list-style-type: none"> Move the slider to activate the function  or deactivate the function . <p>Basic setting: deactivated</p> <p> NOTE: If the online connection is active, the unit can be accessed using REMOTE SERVICE. You can read out unit information, e.g. operating hours and conduct a unit configuration via remote access. In case of service, the technical services can carry out a remote diagnosis online via REMOTE SERVICE.</p>
-------------------	---

Default setting	Description
Menu 09 NETWORK SETTINGS	
Service mode	<p>Service mode (read/write) </p> <p>– Move the slider to activate the function  or deactivate the function .</p> <p>Basic setting: deactivated</p> <p> NOTE:</p> <p>If service mode is active, the unit can be accessed using REMOTE SERVICE. You can call up unit information, e.g. operating hours and conduct a unit configuration via remote access. In case of service, the technical services can carry out a remote diagnosis online via REMOTE SERVICE.</p>



NOTE:

Our products are continually improved to adapt them to your requirements. Please visit our website to download the latest version of the user manual: www.jk-global-service.de

3 Index

C

Chip cards	9
Customer Service.....	2



M

Master code	7
Menu 01	
DISPLAY AND OPERATION.....	10
Menu 02 VIDEOS & IMAGES	15
Menu 03 LIGHTING.....	17
Menu 04 SOUND	20
Menu 05 AIR CONDITIONING & VENTILATION	25
Menu 06 AQUA FRESH & AROMA	28
Menu 07 OPERATING HOURS	29
Menu 08 UNIT INFORMATION.....	39
Menu 09 NETWORK SETTINGS.....	43

P

Pre-setting mode.....	7
Pre-settings.....	10

U

User settings	6
---------------------	---

